



## POSITIONING OF CARBO 60 ON DEZEGA WAIST BELT

Adjust the necessary length of the belt:



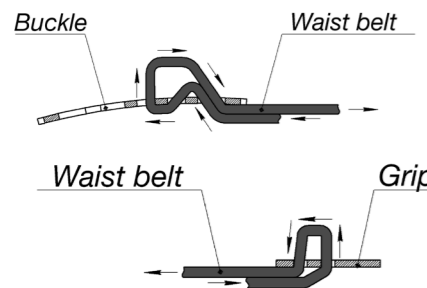


Put on the belt following the next order

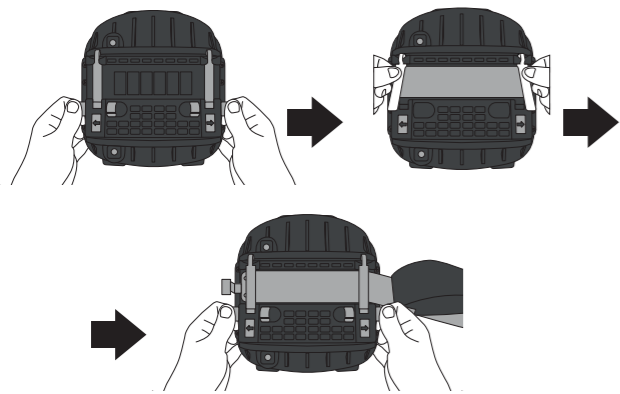


M51-EN-EL-052021

## POSITIONING OF CARBO 60 ON DEZEGA WAIST BELT

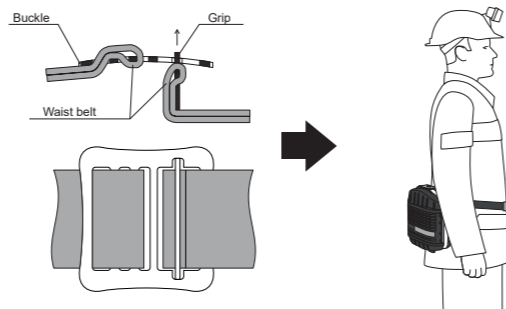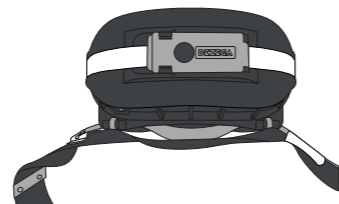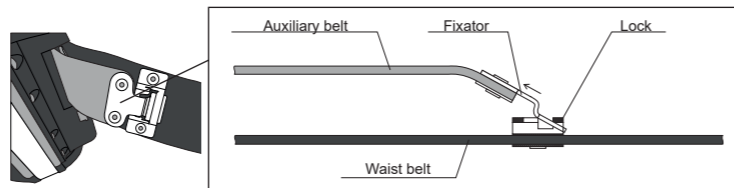

## POSITIONING OF CARBO 60 ON DEZEGA WAIST BELT

Adjust the length of the belt so that it fits tightly to the body

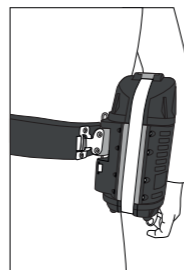

The belt is adjusted correctly




The belt is adjusted incorrectly

# MEMO ON CORRECT USING OF SELF-CONTAINED SELF-RESCUER CARBO 60


**CAUTION!**  
It is mandatory to read  
before each shift!




## Donning procedure

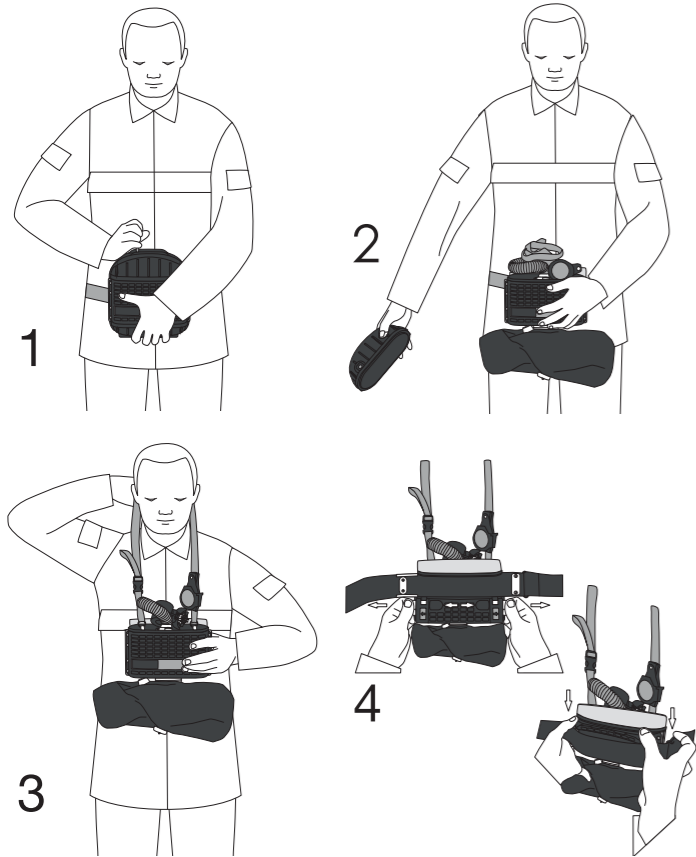


## Donning procedure

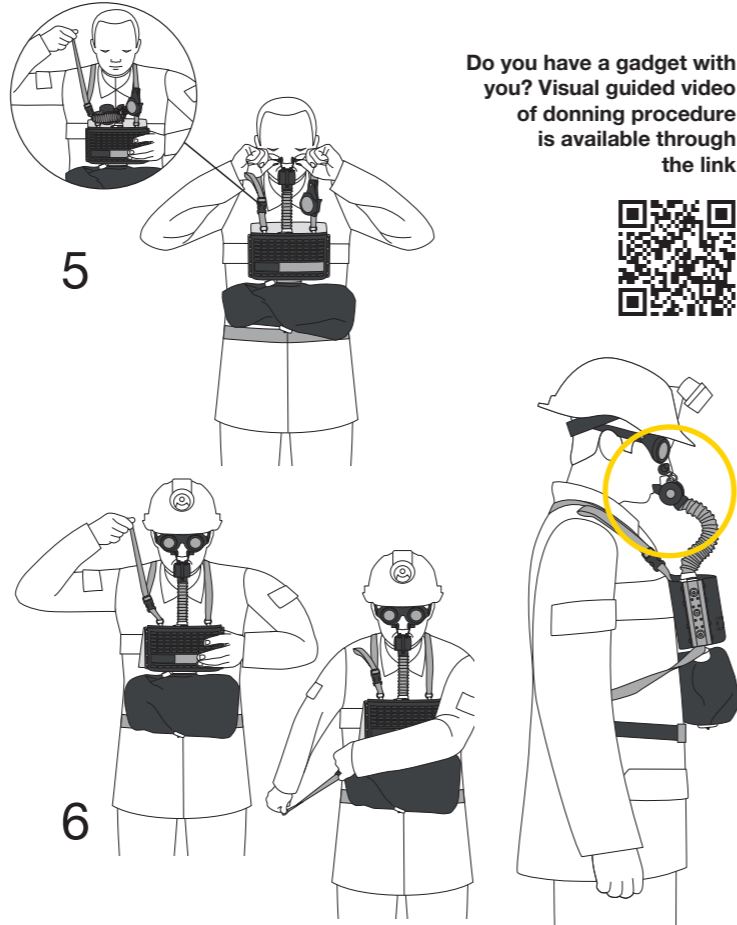

## POSITIONING OF CARBO 60 ON DEZEGA SHOULDER BELT

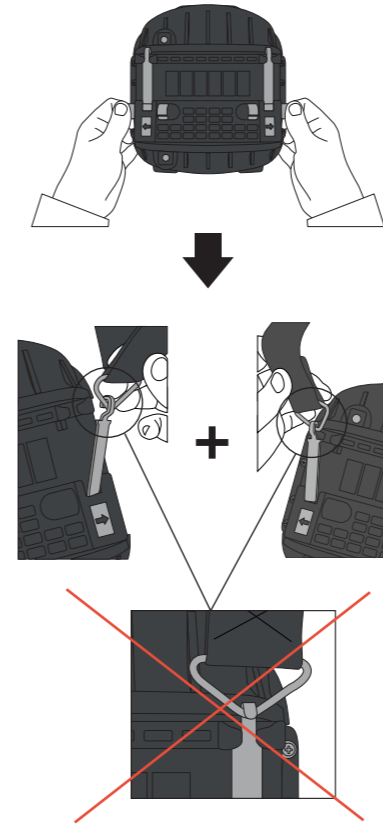

## POSITIONING OF CARBO 60 ON DEZEGA SHOULDER BELT

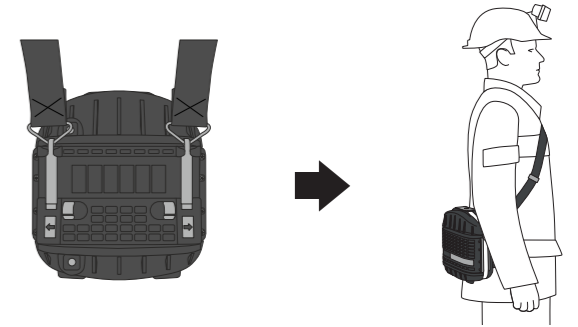

Shoulder belt should be placed in such a way that the buckle for adjustment and the free end of the belt be on the outside



Correct positioning of shoulder belt



Incorrect positioning of shoulder belt